


SLOPED LADDER EXTENSIONS

DWG. # LDW21224MB-XT

- NOTES:**
1. LADDER AND BRACKETS SHIP LOOSE. FIELD INSTALLATION BY OTHERS IS REQUIRED.
 2. REFER TO RIGGING PACK FOR LADDER AND PLATFORM MOUNTING INSTRUCTIONS.
 3. RIG LADDER BEFORE INSTALLING PIPEWORK TO UNIT.

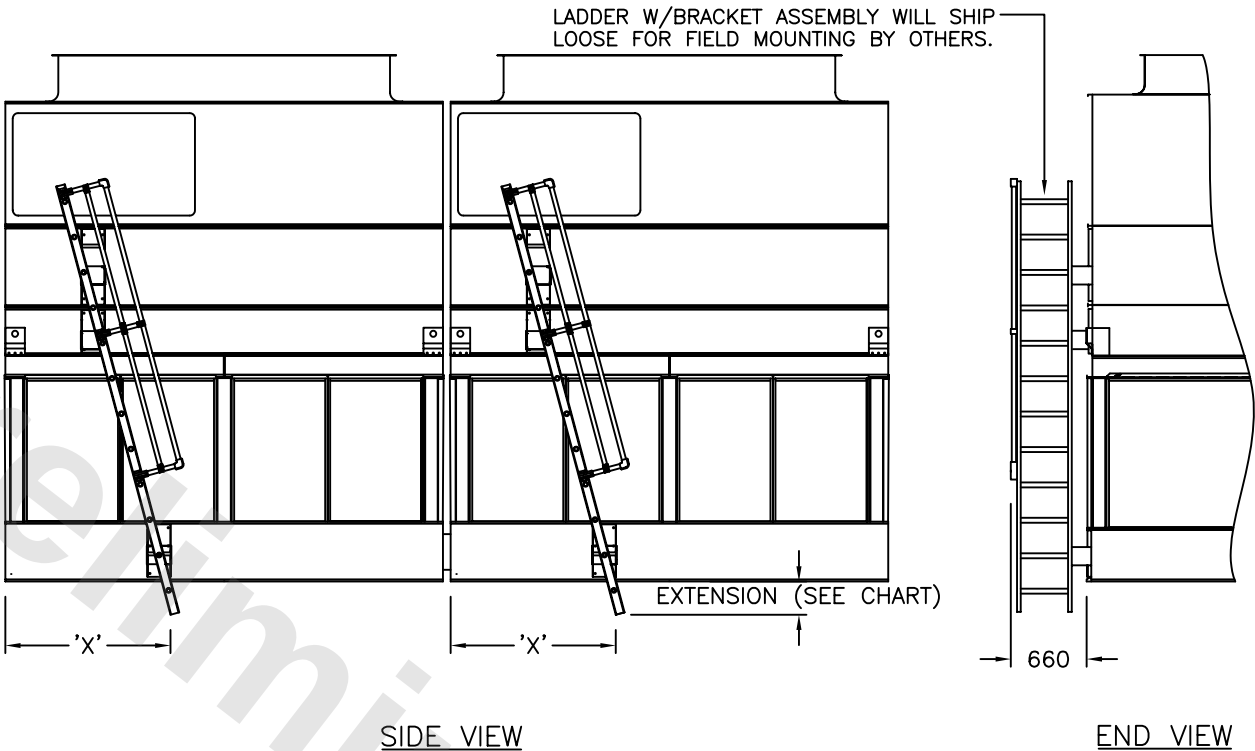

MODEL NUMBER	MODEL NUMBER	305mm EXTENSION	610mm EXTENSION	914mm EXTENSION
COOLER	CONDENSER	'X'	'X'	'X'
ATW 286-3K,3L	—	1381	1464	1546
ATW 286-4L,4M	ATC 858B,913B,949B	1432	1515	1597
ATW 286-5L,5M	ATC 1007B,1047B,1078B	1508	1591	1673
ATW 286-6M,6N	ATC 980B,1085B,1118B,1167B	1568	1651	1734

CUSTOMER INSTALLATION NOTES:

- a. REMOVE LADDER BRACKET MOUNTING BOLTS (1) FROM LADDER MOUNTING CHANNELS (2) ON PAN AND CASING SECTIONS.
- b. LOOSEN, BUT DO NOT REMOVE, LADDER BRACKET AND ASSY. BOLTS (3).
- c. TO ASSEMBLE, SLIDE LADDER BRACKET ASSY. (4) OVER LADDER MOUNTING CHANNELS (2) LOCATED ON PAN AND CASING (DO NOT REMOVE LADDER BRACKET ASSY. (4) FROM LADDER.)
- d. ALIGN HOLES AND REINSTALL LADDER BRACKET MOUNTING BOLTS (1) THROUGH LADDER BRACKET ASSY. (4) AND LADDER MOUNTING CHANNELS (2).
- e. TIGHTEN ALL BOLTS.
- f. TIGHTEN ADJUSTING SCREW (5) IN THE ADJUSTABLE MOUNTING BRACKETS WHEN APPLICABLE.

