SLOPED LADDER EXTENSIONS

DWG. # LDW21228EB-XT

NOTES:
1. LADDER AND BRACKETS SHIP LOOSE. FIELD INSTALLATION BY OTHERS IS REQUIRED.
2. REFER TO RIGGING PACK FOR LADDER AND PLATFORM MOUNTING INSTRUCTIONS.
3. RIG LADDER BEFORE INSTALLING PIPEWORK TO UNIT.

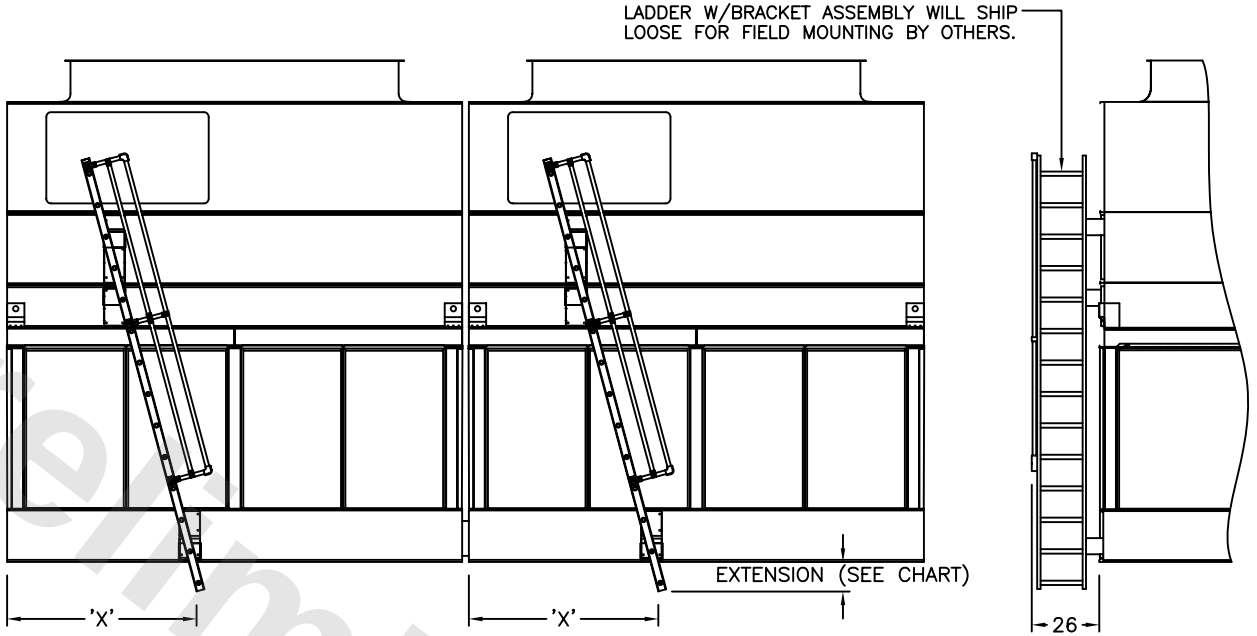

SIDE VIEW

END VIEW

MODEL NUMBER COOLER	MODEL NUMBER CONDENSER	1' EXTENSION 'X'	2' EXTENSION 'X'	3' EXTENSION 'X'
ATW 334–3L,3M	–	70 1/4	73 1/2	76 3/4
ATW 334–4L,4M	–	71 5/8	74 7/8	78 1/8
ATW 334–5M,5N	ATC 1164B	73 1/4	76 1/2	79 3/4
ATW 334–6M,6N	ATC 1204B,1240B,1294B	75 7/8	79 1/8	82 3/8

CUSTOMER INSTALLATION NOTES:

a. REMOVE LADDER BRACKET MOUNTING BOLTS (1) FROM LADDER MOUNTING CHANNELS (2) ON PAN AND CASING SECTIONS.
b. LOOSEN, BUT DO NOT REMOVE, LADDER BRACKET AND ASSY. BOLTS (3).
c. TO ASSEMBLE, SLIDE LADDER BRACKET ASSY. (4) OVER LADDER MOUNTING CHANNELS (2) LOCATED ON PAN AND CASING (DO NOT REMOVE LADDER BRACKET ASSY. (4) FROM LADDER.)
d. ALIGN HOLES AND REINSTALL LADDER BRACKET MOUNTING BOLTS (1) THROUGH LADDER BRACKET ASSY. (4) AND LADDER MOUNTING CHANNELS (2).
e. TIGHTEN ALL BOLTS.
f. TIGHTEN ADJUSTING SCREW (5) IN THE ADJUSTABLE MOUNTING BRACKETS WHEN APPLICABLE.

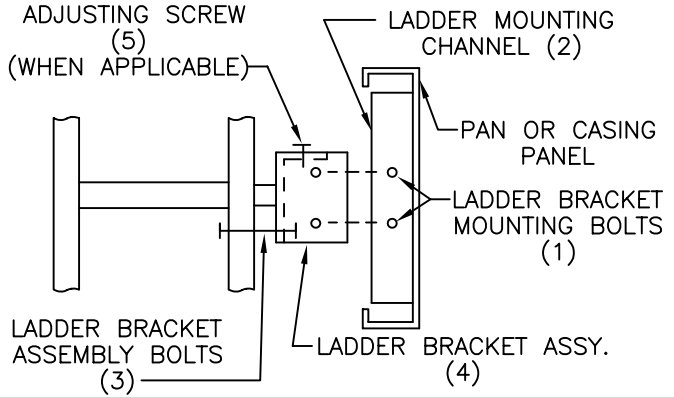

Preliminary